

Chapter Eight

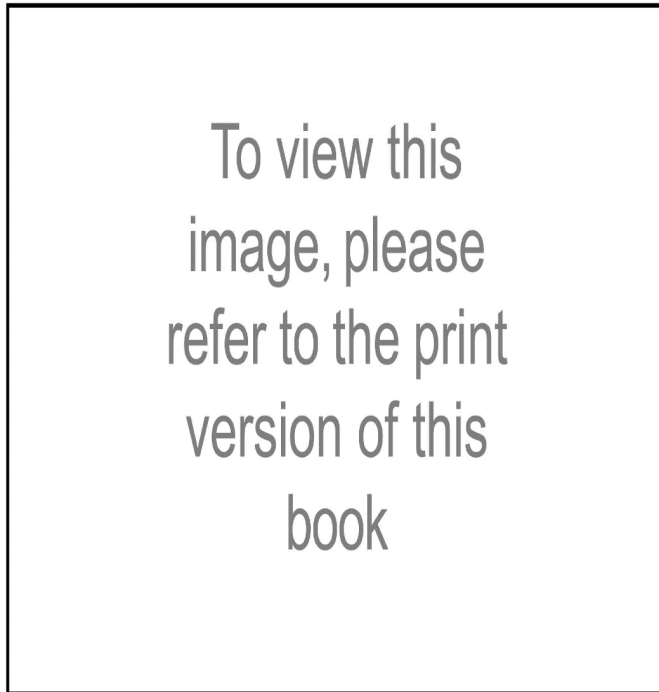


Fig. 8-5. Remove protective covering to access the battery.

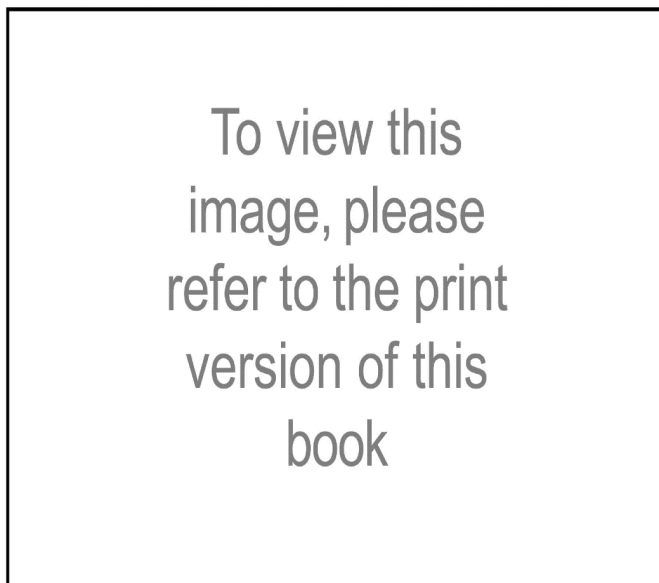


Fig. 8-6. Remove cover and check cable contacts for corrosion and security.