

This document is not an ASTM standard and is intended only to provide the user of an ASTM standard an indication of what changes have been made to the previous version. Because it may not be technically possible to adequately depict all changes accurately, ASTM recommends that users consult prior editions as appropriate. In all cases only the current version of the standard as published by ASTM is to be considered the official document.



**Designation: D 3117 – 96<sup>€1</sup>**



Designation: D 3117 – 03

An American National Standard

## Standard Test Method for Wax Appearance Point of Distillate Fuels<sup>1</sup>

This standard is issued under the fixed designation D 3117; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

~~ε<sup>1</sup> Note—Figure was corrected editorially in October 1997.~~

<sup>1</sup> This test method is under the jurisdiction of ASTM Committee D-2 D02 on Petroleum Products and Lubricants and is the direct responsibility of Subcommittee D02.07 on Flow Properties.

Current edition approved Nov. March 10, 1996; 2003. Published January 1997; May 2003. Originally published as D3117-72; approved in 1972. Last previous edition D3117-87 (1993) approved in 1996 as D 3117-96<sup>ε1</sup>.

### 1. Scope \*

1.1 This test method covers the detection of wax in burner fuels, diesel fuels, and turbine engine fuels in the range from –26 to +2°C. It is applicable to a dark-colored oil if the stirrer can be seen under illumination.

1.2 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.* For specific hazard statements, see ~~Notes 2 through 5; Section 7.~~

### 2. Referenced Documents

#### 2.1 ASTM Standards:

D 2386 Test 445 Test Method for Freezing Point Kinematic Viscosity of Aviation Fuels Transparent and Opaque Liquids<sup>2</sup>

D 2500 Test 2386 Test Method for Freezing Point of Aviation Fuels<sup>2</sup>

D 2500 Test Method for Cloud Point of Petroleum Oils Products<sup>2</sup>

E 1 Specification for ASTM Thermometers<sup>3</sup>

### 3. Terminology

#### 3.1 Definitions of Terms Specific to This Standard:

3.1.1 *wax appearance point*—the temperature at which wax first begins to separate from the liquid when it is cooled under prescribed conditions.

### 4. Summary of Test Method

4.1 A specimen of distillate fuel is cooled under prescribed conditions while being stirred. The temperature at which wax first appears is recorded as the wax appearance point.

### 5. Significance and Use

5.1 Wax appearance point is the temperature at which wax crystals begin to precipitate out of a fuel under specified cooling conditions. The presence of wax crystals in the fuel may restrict flow or plug the fuel filter. In critical fuel systems, wax appearance point may define the lower limit of acceptable operability.

### 6. Apparatus (Fig. 1) Apparatus

6.1 *Specimen Tube*—A double-walled (Dewar-type) jacketed tube with dimensions shown in Fig. 2 1.

6.2 *Temperature Measuring Device*—Liquid-in-glass thermometer—~~ε~~ conforming to specifications for ASTM Thermometer 62C in accordance with Specification E 1, or any other temperature measuring device with equal or better accuracy and equal temperature response.

6.3 *Stirrer Assembly*—A stainless steel wire configured in the manner described in Fig. 3 2 and manipulated by a motor or other suitable device in a vertical direction. The frequency of movement shall be  $55 \pm 5$  cycles/min with an amplitude of  $50 \pm 5$  mm. The stirrer shall be concentric with the thermometer temperature measuring device and shall be fitted with the moisture proof collar specified in Test Method D 2386. A No. 3, two-hole neoprene rubber stopper shall be used to seal the top of the specimen tube.

<sup>2</sup> Annual Book of ASTM Standards, Vol 05.01.

<sup>3</sup> Annual Book of ASTM Standards, Vol 14.03.



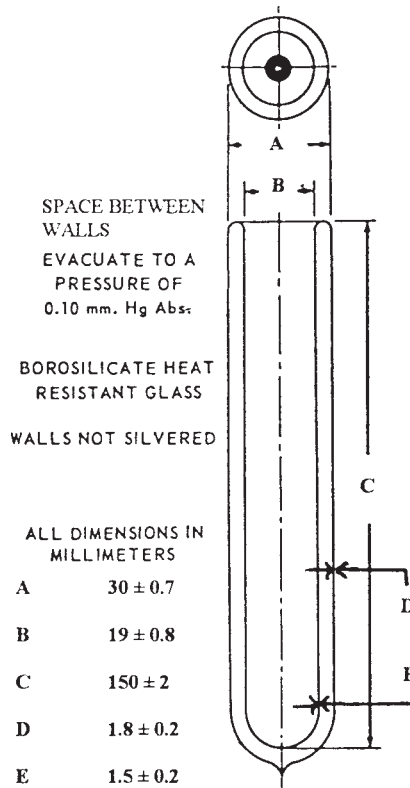


FIG. 2 1 Specimen Tube

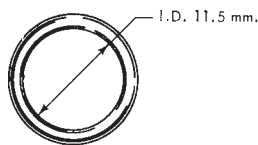

STAINLESS STEEL STIRRER

ALL DIMENSIONS IN MILLIMETERS

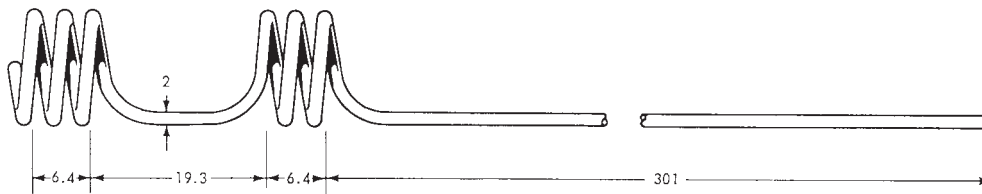

NOTE 1—Tolerance on all dimensions are + or - 2 mm, except on wire thickness.

FIG. 3 2 Stirrer

6.4 *Cooling Bath*—Use an unsilvered vacuum flask having minimum dimensions of 200-mm depth and 65-mm internal diameter. The bath temperature, below  $-45^{\circ}\text{C}$ , may be maintained by refrigeration or suitable freezing mixtures (Note 27.1). Bath temperature is monitored with an appropriate ~~thermometer~~ temperature measuring device such as ASTM Thermometer 6C/HP2C 6C.

NOTE 1—Solid carbon dioxide chips (dry ice) and isopropanol is a recommended mixture for coolant. An excess of dry ice should be avoided to prevent obscuring the sample tube in a continuous stream of bubbles. Isopropanol should be replaced daily or when low temperature viscosity is noticeably higher than a fresh bath. Liquid nitrogen may also be used as coolant instead of liquids cooled with solid carbon dioxide.

6.5 *Illumination*—A 150 to 230-mm long, 5 to 8-W fluorescent tube shall be mounted behind the specimen to illuminate it with transmitted light. Observations shall be made with the sample tube between the observer's eye and the lamp.

6.6 *Clock*—Use a clock or other timing device readable to 10 s to monitor the cooling rate.

7. Materials

7.1 *Carbon Dioxide (Solid) or Dry Ice*—(Warning—see Note 2).—(Warning—Extremely cold,  $-78^{\circ}\text{C}$ .) A commercial grade of dry ice is suitable for use in the cooling bath (Note 6).

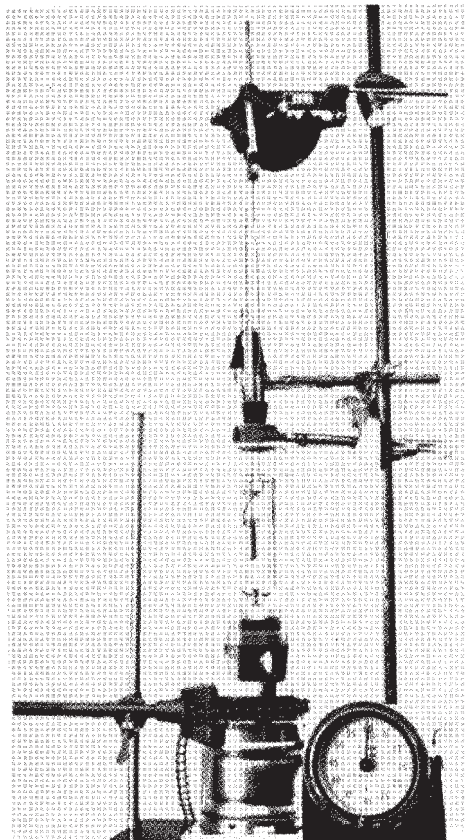


FIG. 1 3 Complete Assembly

NOTE 2—**Warning:** Extremely cold,  $-78^{\circ}\text{C}$ . 2).

7.2 *Isopropanol or Isopropyl Alcohol*—(**Warning**—see Note 3).— (**Warning**—Extremely flammable.) A commercial or technical grade of isopropanol is suitable for the cooling bath. NOTE 3—**Warning:** Extremely flammable.

7.3 Liquid

7.3 *Liquid Nitrogen*—(**Warning**—see Note 4).— (**Warning**—Extremely cold,  $-196^{\circ}\text{C}$ .) A commercial or technical grade of liquid nitrogen is suitable for the cooling bath. See Note-6.

NOTE 4—**Warning:** Extremely cold,  $-196^{\circ}\text{C}$ .

NOTE 5—**Warning:** Carbon 2. (**Warning**— Carbon dioxide (solid) and liquid nitrogen liberate gases that can cause suffocation. Contact with skin causes burns, freezing, or both.)

## 8. Procedure

### 8.1 Check

8.1 Ensure that the thermometer each day the test temperature measuring device is run by immersing it in an ice-water slurry. An acceptable thermometer will show  $0 \pm 0.1^{\circ}\text{C}$  calibration. For liquid-in-glass temperature measuring devices, see the Annex on Calibration in Test Method D 445.

NOTE 62—Because ambient temperatures are well above the range of ASTM Thermometer 62C, the mercury liquid-in-glass thread will extend upward into the expansion chamber. During cooling, the thermometer liquid-in-glass temperature measuring device must be examined to make certain that no mercury separation occurs. If a low reading is obtained observed in the ice-water slurry, it may be due to separation. Warm the thermometer, tap until the mercury no longer shows any separation, and retest. The thermometer should be stored in a vertical position with the mercury bulb at the bottom liquid.

8.2 Sample temperature shall not be lower than  $10^{\circ}\text{C}$  when starting the measurement. Dry the specimen by filtration through a lintless filter paper.

8.3 Assemble the unit as shown in Fig. 1-3.

8.4 With the oil at  $10^{\circ}\text{C}$  or above, introduce a  $25 \pm 1\text{-mL}$  specimen into the tube. Add three drops of anhydrous isopropanol.

8.5 Adjust the stopper, thermometer, temperature measuring device, and stirrer so that the bottom of the thermometer bulb temperature measuring device is 25 mm above the bottom of the specimen tube and the stirrer does not break the surface at the upper end of its stroke.

8.6 When the stopper has been firmly seated, start the stirrer, raise the cooling bath around the specimen tube, and cool rapidly to 2°C.

8.7 Once the ~~thermometer temperature~~ reading is ~~within the graduated region, below 2°C~~, adjust the bath height to keep the cooling rate between 1 and 2°C/min. The preferred cooling rate is 1.5°C/min.

8.8 Continue cooling until wax distinctly appears when the specimen tube is examined by transmitted light. This is manifested by the appearance of very small wax crystals which make the stirring pattern quite obvious. An example of the change observed is shown in Fig. 4 and Fig. 5. ~~Read. Observe the thermometer temperature reading~~ immediately to the nearest 0.2°C.

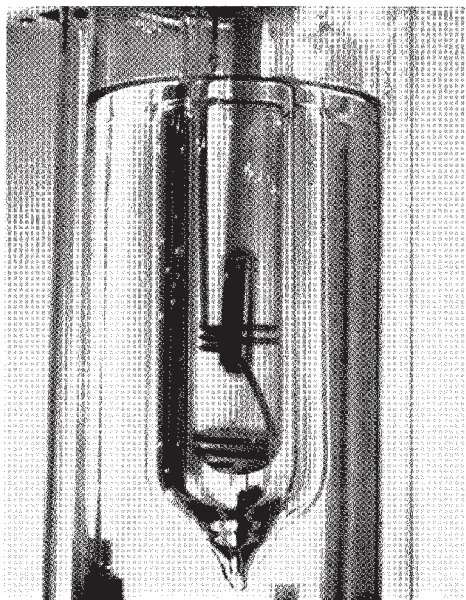


FIG. 5 Tube After Wax Appearance

NOTE 73—The wax appearance point should not be misinterpreted to be the appearance of the very first crystals. The temperature at which a distinct swirl of wax particles around the stirrer occurs is the correct interpretation.

## 9. Report

9.1 The temperature at which the wax crystals are obviously present is the wax appearance point and is reported to the nearest 0.2°C.

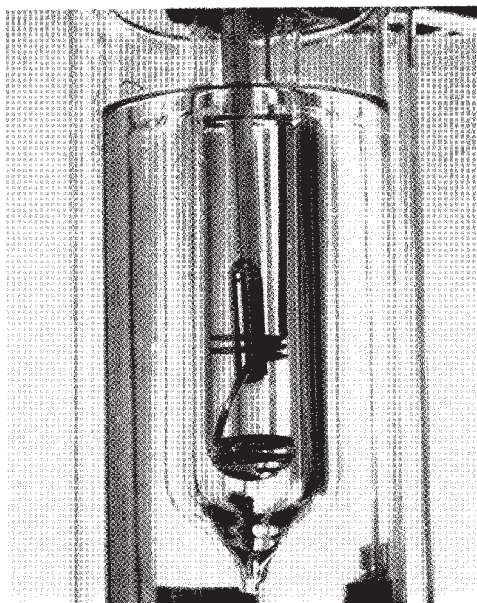


FIG. 4 Tube Before Wax Appearance

## 10. Precision and Bias

10.1 *Precision*—The precision of this test method obtained by the statistical examination of interlaboratory test results is as follows:

10.1.1 *Repeatability*—The difference between two test results obtained by the same operator with the same apparatus under constant operating conditions on the same fuel sample would, in the long run, in the normal and correct operation of the test method, exceed 0.8°C only in one case in twenty.

10.1.2 *Reproducibility*—The difference between two single and independent results obtained by different operators working in different laboratories on the same fuel sample would, in the long run, in the normal and correct operation of the test method, exceed 2.2°C only in one case in twenty.

10.2 *Bias*—Because liquid hydrocarbon standards of known wax appearance point are not available, no statement of bias can be made.

NOTE 84—These precision data were obtained in a cooperative program among eight laboratories testing eight fuels for both wax appearance point and cloud point by Test Method D 2500. None of the fuels contained wax crystal modifying additives.

## 11. Keywords

11.1 distillate fuels; wax

## SUMMARY OF CHANGES

Subcommittee D02.07 has identified the location of selected changes to this standard since the last issue (D 3117-96<sup>e1</sup>) that may impact the use of this standard.

(1) Added Test Method D 445 to Section 2, Referenced Documents.

(2) Added “temperature measuring device” throughout.

*ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.*

*This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.*

*This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org).*