



Standard Practice for Sampling Phytoplankton with Water-Sampling Bottles¹

This standard is issued under the fixed designation D 4136; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

1. Scope

1.1 This practice covers the procedures for obtaining quantitative samples of a phytoplankton community by use of water-sampling bottles.

1.2 *This standard does not purport to address all of the safety problems, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 *ASTM Standards:*²

D 4137 Practice for Preserving Phytoplankton Samples

3. Summary of Practice

3.1 A sampler is lowered to a specified depth and closed by a messenger. The sampler is retrieved and the sample is removed. The phytoplankton are preserved as dictated by the objectives of the study.

4. Significance and Use

4.1 The *advantages* of water-sampling bottles are as follows:

4.1.1 Samples of known volume can be obtained from a precise depth.

4.1.2 A quantitative sample is obtained. Nanno- and ultra-phytoplankton are not lost from the sampling device.

4.1.3 A sampler of almost any desired volume or construction material can be obtained.

4.1.4 The sampler is light-weight and can be used without auxiliary equipment.

4.1.5 There is a free flow of water through the cylinder of the sampler when it is being lowered.

4.1.6 Samplers can be arranged serially to facilitate sampling at several depths almost simultaneously.

4.1.7 The sampler can be used in most depths of water.

4.2 The *disadvantages* of water-sampling bottles are as follows:

4.2.1 Samples are obtained from only discrete depths; they cannot be obtained from horizontal or vertical strata of water.

4.2.2 The samplers cannot be used satisfactorily in fast-flowing water.

4.3 There are several *special considerations* that shall be observed when using water-sampling bottles. They are as follows:

4.3.1 The samplers should be protected from damage, which commonly results in leakage.

4.3.2 Following use, the samplers should be hung open in a horizontal position to allow for thorough drying.

4.3.3 The end stoppers should be inspected periodically for signs of wear or deterioration and replaced as necessary (Fig. 1a, b, c).

5. Apparatus

5.1 Most water-sampling bottles, (Fig. 1a, b, c, d), consist of a cylindrical tube with stoppers at each end and a closing device activated by a messenger. The most commonly used samplers that operate on this principle are the Kemmerer, Van Dorn, Nansen, and Fjarlie bottles. The Kemmerer and Van Dorn bottles are similar in design and differ only in the design of the closure mechanism. The Nansen bottle is a reversing bottle in that when it is tripped, valves at each end close and the bottle rotates 180°. The rotation releases a second messenger that trips another sampler at a lower depth and so on. The Fjarlie bottle, designed for sampling from great depths, is also a series-type sampler and contains an auxiliary assembly for mounting reversing thermometers. Most water-sampling bottles are available in a variety of construction materials (for example, brass, clear acrylic, and polyvinyl chloride). They may be TFE-fluorocarbon-lined. The volume of the samplers varies from about 0.2 to over 30 L.

¹ This practice is under the jurisdiction of ASTM Committee E47 on Biological Effects and Environmental Fate and is the direct responsibility of Subcommittee E47.01 on Aquatic Assessment and Toxicology.

Current edition approved April 1, 2004. Published April 2004. Originally approved in 1982. Last previous edition approved in 1998 as D 4136 – 82 (1998).

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

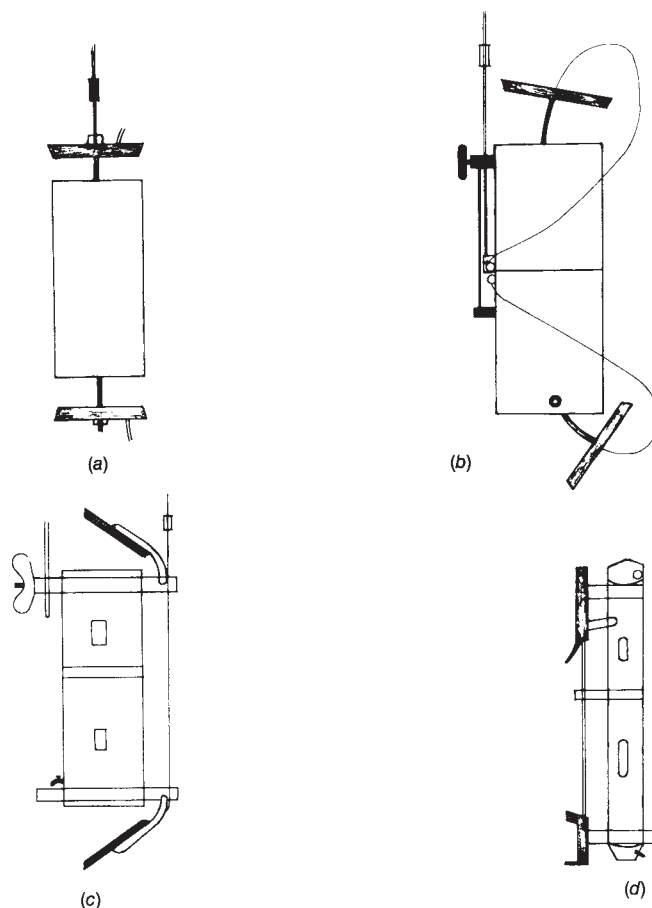


FIG. 1 Water-Sampling Bottles (a) Kemmerer (b) Van Dorn (c) Nansen (d) Fjarlie (Illustration by J. W. Steiner and W. G. Hester, U.S. Geological Survey, Doraville, GA)

6. Procedure

6.1 Lower the sampler in the open position to a desired depth, trip, and retrieve. The enclosed volume of water

contains the trapped organisms. Preserve the plankton as described in Practice D 4137.

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org).